

All weather Breather size guide



1. Measure your horse's head

Use a soft tape measure (or a piece of string) to measure in centimeters from the protruding cheek bone to the bottom of the nostril as shown by the yellow line and then measure all the way round the nose placing the tape in the chin groove and just behind the nostrils as shown by the green line.

The size of the horse does not necessarily determine the size of AW needed as head sizes are very variable. So its important to take these measurements in order to get an AW that will fit.

2. Check the measures against the chart below to determine the size of the AW

protruding cheek bone to
bottom of nostril (yellow
line)

circumference round
nose, along chin groove
and behind nostrils
(green)

size of AW required

20.5 to 22 cm	38 to 42 cm	small fine
22 to 26 cm	42 to 47 cm	medium fine
26 to 31.5 cm	47 to 53.5 cm	medium
31.5 to 34 cm	53.5 to 60 cm	large, heavy